

Shabbos Safe Warming Tray

Owner's Manual
Model: TYCSS11


**Halachically Certified
Food Warming Tray**



Safety Certified



Intertek

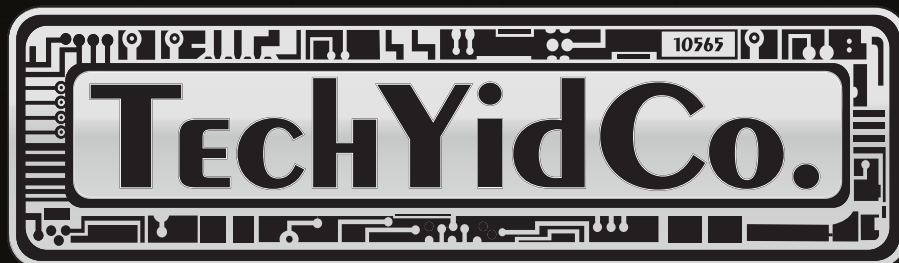

Model: TYCSS11

TechYidCo. is dedicated to manufacturing High Quality, Safe appliances so that your family can truly rest on Shabbat!

PRO TIP: If you feel your warming tray is under-heating certain foods, try the following:

For high density foods like soups and *kugel* that may not be reaching desired temperatures, try putting food in a lighter-weight or aluminum pan, directly on the surface of the warming tray.

If the warming tray is burning the food: For light-density foods like chicken or vegetables, try putting an extra aluminum pan under the pan containing food.

Note: the center of the warming tray is always hotter than the sides and the corners.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS



-FOR HOUSEHOLD USE ONLY-

-POUR USAGE DOMESTIQUE SEULEMENT-

Be sure to read the following instructions before using the electric warming plate

Important Precautions to Remember:

1. To protect against electrical shock, never immerse the electrical base, plugs or power supply cord in water or other liquid.
2. Never leave the appliance unattended if used near children.
3. The appliance should not be operated by children.
4. The parts which are easy to touch may become hot; keep out of reach of children.
5. Never use a scouring pad, abrasive sponge or harsh cleaning products on warming tray.
6. Never use for any purpose other than what this item was intended.
7. Do not place the appliance in dishwasher.
8. Unplug warming tray from electrical outlet when not in use and before cleaning.
9. Do not place the warming tray on a wet surface or near any flammable objects.
10. Do not move the warming tray while it is in use or while it has food on it.
11. Do not operate the appliance with a damaged cord, plug, after a malfunction or if it has been damaged in any manner. Call TechYidCo for further instructions.
12. The outer surface gets hot when the appliance is operating—do not touch.
13. The appliance is not permitted for outdoor use.
14. Allow to cool before storing.
15. The use of accessory attachments is not recommended by the appliance manufacturer and may cause injuries.
16. Do not let cord hang over edge of table or counter, or touch hot surfaces.
17. Do not place on or near a gas or electric burner that is hot, or in a heated oven.
18. There is no on/off button. To turn off, remove plug from wall outlet.

SAVE THESE INSTRUCTIONS

SAFETY INSTRUCTIONS

This appliance is for HOUSEHOLD USE ONLY.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
2. The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The extension cord should be a grounding-type 3-wire cord.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

TechYidCo. is dedicated to manufacturing Hallachically approved, high quality, safe appliances so that your family can truly rest on Shabbat!

TechYidCo. LLC

Staten Island, NY

E-mail: info@techyidco.com

www.techyidco.com

Tech support & orders: 1 (844) 869-8324

In cooperation with:

Kosher Innovations

4515 Chesswood Drive, Unit M


Toronto, ON M3J 2V6

Canada

www.kosher-innovations.com

FEATURES:

1. Stainless Steel Top Surface
2. Rubberized Aluminum Handles
3. Power On indicator Light
4. Stainless Steel Frame Body
5. Three-prong Appliance Leakage-Current Interrupter (ALCI)
6. TEST and RESET buttons

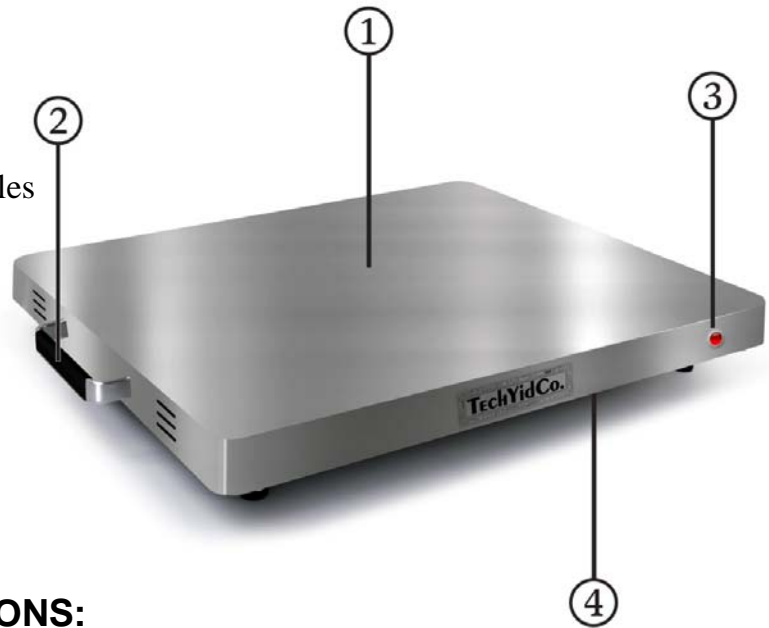

OPERATING INSTRUCTIONS:

1. Place your Shabbos Safe Warming Tray on a flat surface with enough space around it so it will avoid contact or proximity to other (potentially flammable) objects.
2. Plug the power cord into a suitable power outlet. Ensure that the plug is fully inserted and the light indicator must be on. (There is no on/off switch)
3. Place the vessels containing food to be warmed directly on the surface. Make sure that the vessels are capable of withstanding the temperature on the surface.
4. This product is not a cooking appliance, it is to keep food warm only.
5. Clean the warming tray before and after use with a towel or soft cloth.
6. This appliance should not be operated by children or persons or persons with reduced physical, sensory or mental capabilities, or lack of experience or suitable training, unless they have been given supervision or instructions concerning the safe use of the appliance by a person responsible for their safety.
7. Always operate this from an earthed domestic 120V 60Hz power socket.

8. Plug unit into wall socket.

Press TEST button before each use, RESET button should pop out.

***Press RESET button for use, do not use if above test failed.**



Appliance Specifications :

- 120V, 60Hz, 300W
- Stainless Steel Top Surface
- Light indicator
- 2-prong Appliance Leakage-Current Interrupter (ALCI)

MAINTENANCE & CARE

1. After use, make sure the plug is removed from the power supply socket. After the appliance is completely cooled down, clean it using a mild cleaner or gel-like cleaner with a soft cloth.
2. Do not clean the unit when it is still hot.
3. Clean the top surface with caution - If a wet sponge or cloth towel is used to wipe spills on the hot warming tray, be careful to avoid steam burns, some cleaners can produce noxious fumes if applied to a hot surface.
4. Do not use hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner to clean this appliance.
5. Unless in very extreme circumstance you could use mild steel wool to gently wipe away the tough stains.
6. Put the hot plate on a cool place right after the cleaning.
7. Do not operate the appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. The appliance is for HOUSEHOLD USE ONLY.



TechYidco. LLC
Staten Island, NY
U.S.A

For all general information and questions contact: info@techyidco.com

For all warranty information please refer the Warranty Card included in packaging.



February 2nd, 2016
כג' שבט תשע"ו

**Approval for Use on Shabbos and Yom Tov
for the "Shabbos Safe Warming Tray"**

To Our Dear Friend, BenTzion Davis,

After reviewing your safer and more energy efficient new hotplate, we can safely say that halachically, it is the same as any other hotplates on the market, which Klal Yisrael have been using for years. It has no knobs to adjust the heat level, and acts only as a warming plate. In addition, you have wisely crafted your device out of stainless steel, a material that can be kashered. With regards to both the Shabbos use of a hotplate, and kashering such a hot plate, one should of course seek the advice of their own local community Orthodox Rabbi; however, we can attest that this hotplate poses no additional concerns beyond those of other stainless steel hotplates on the market. The world of Torah Judaism will certainly benefit from having a product such as yours available. It will surely make for a safer Shabbos experience for many families. May you be blessed with continued hatzlacha in this and all of your endeavors.

Be'Birchas Hatzlacha Rabbah Ve'KolTuv!

**Guidelines for Use on Shabbos and Yom Tov
For the "Shabbos Safe Warming Tray"**

The Shabbos Safe hotplate is permissible for use on Shabbos. Classic use of the hotplate is for foods that are already cooked and need to remain hot for Shabbos. When such foods are placed on the stove before Shabbos, they require a blech, or cover over the flame. The Shabbos Safe hotplate does not require a blech. The Shabbos Safe unit only has one setting and there is no method for changing the temperature. Additionally, the heating element is mounted by metal framework to the bottom housing. There is a one inch gap of internal airspace between the heating element and the surface of the hotplate. Thus, the surface acts as the blech. Another use of the hotplate is to place fully cooked, dry foods on the hotplate, on Shabbos. The Shabbos Safe hotplate's surface heat is easily depleted since it is not in direct contact with the heating element making halachic bishul inefficient and difficult. Multiple tests have shown that the Shabbos Safe hotplate cannot efficiently cook food, if at all. Thus, in a manner specified by Halacha, one may use the Shabbos Safe hotplate for warming fully cooked, dry foods. **ONE SHOULD CONSULT THEIR HALACHIC AUTHORITY REGARDING HOW TO PROPERLY USE A HOTPLATE IN THIS MANNER.**

VA'AD HAKASHRUS

Rabbi Kenneth Brodkin • Rabbi Tzvi Fischer • Rabbi Motti Wilhelm • Rabbi Michael Kaplan

ADMINISTRATIVE STAFF

Tuvia Berzow: Executive Director

Rabbi Dov Chastain: Rabbinic Administrator

Conditional 1 Year Warranty

This product is warranted for 1 year against defects in materials and workmanship from the date of the original purchase. Within this 1 year period, and at the discretion of TechYidCo., a defective product will be repaired or replaced and returned to the customer. TechYidCo. also warrants the product to be free of internal failures up to 1 year from original purchase and covers parts and labor only on repairs within this time period. This warranty is solely for the benefit of the original purchaser (Retain your dated sales receipt as proof of purchase).

NOT COVERED: Damages caused by abuse or failure to perform normal maintenance. This warranty is limited to the value of the product purchased, it does not cover any other expense. This Warranty shall not apply to any defect, malfunction or failure to conform to the warranty provisions if caused by damage (not resulting from defect or malfunction) due to unreasonable use by the purchaser. Warranty will be voided if the product has been tampered with in ways that is not meant to be used--such as opening the Shabbos Safe Warming Tray casing. Not covered are repairs attempted by unauthorized persons. Also not covered are consequential damages, incidental damages or incidental expenses, including damage to property. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, which may vary from State to State.

QUALIFICATIONS FOR WARRANTY PERFORMANCE: To be returned, you must provide a proof of purchase and written narrative description of the defect together with your name and address, freight prepaid to TechYidCo. The product will be repaired or replaced at the option of TechYidCo, and returned, postage prepaid as soon as practical, but in no event later than 45 days after received by TechYidCo. Email info@techyidco.com or Call 1-(844) 869-8324 for complete return instructions.

REQUEST FOR WARRANTY ACTION: Please direct all requests for action on this warranty or any other product inquiries to: Email info@techyidco.com, or call 1-(844) 869-8324